

FIG. 1

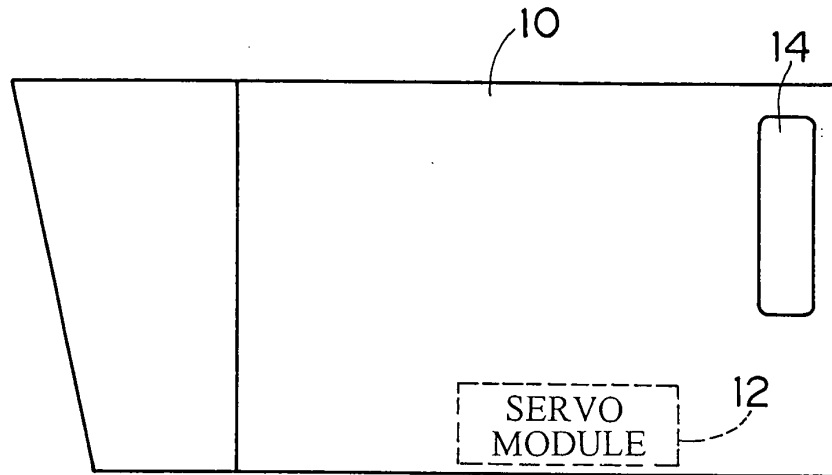


FIG. 2


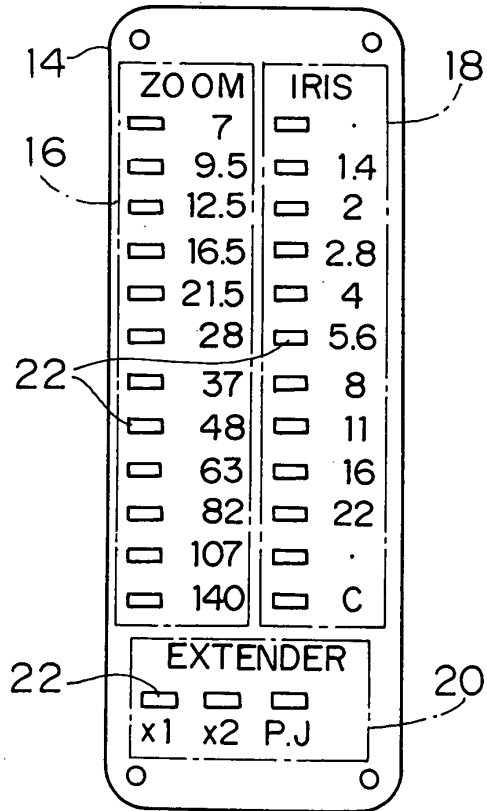


FIG. 3

FIG. 3

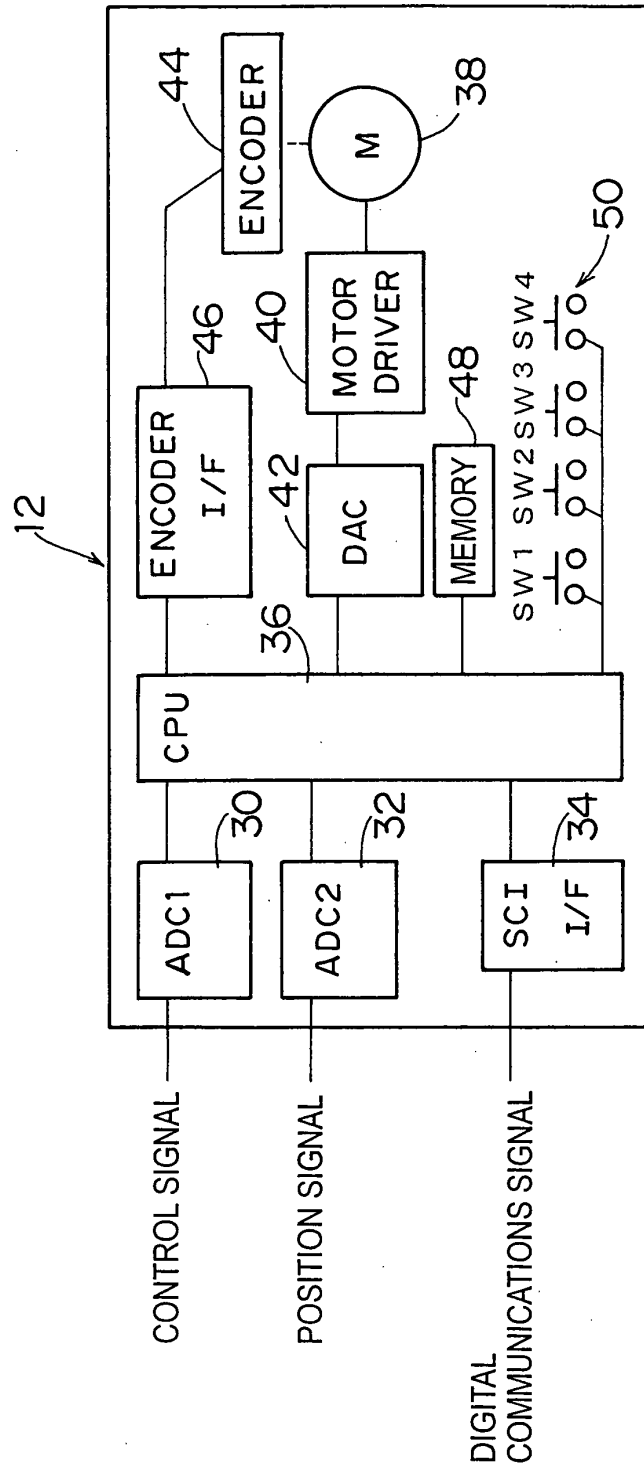

F I G . 4

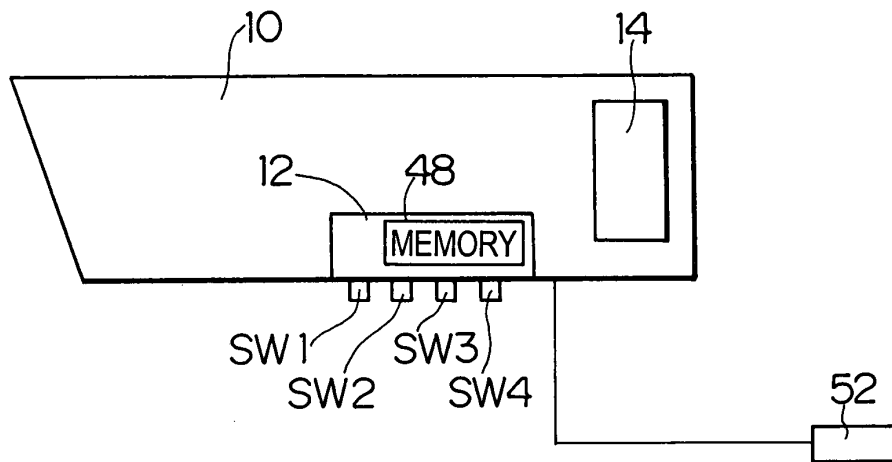


FIG. 5

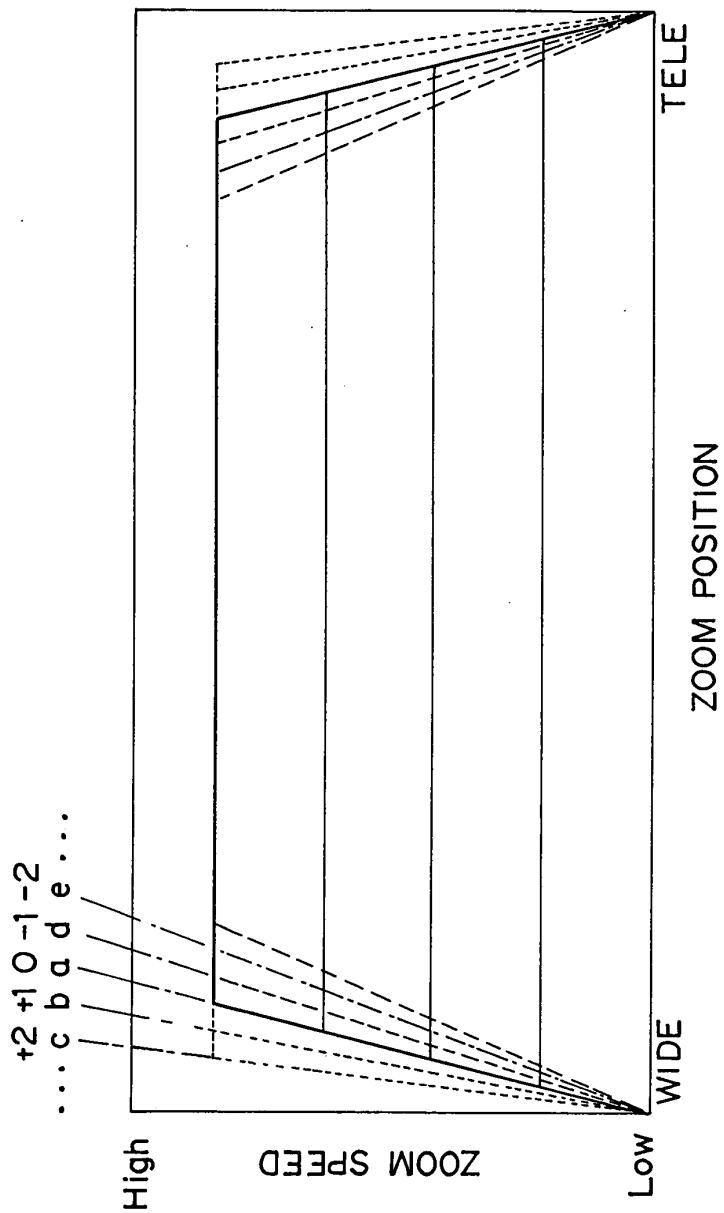


FIG. 6

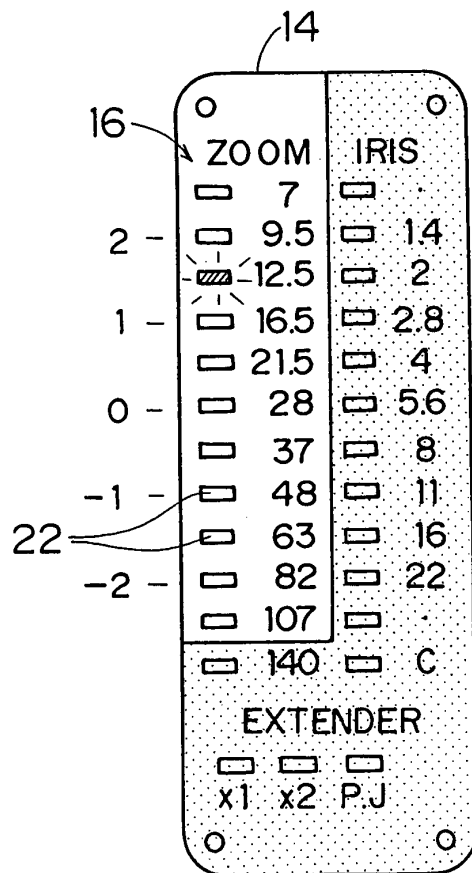


FIG. 7

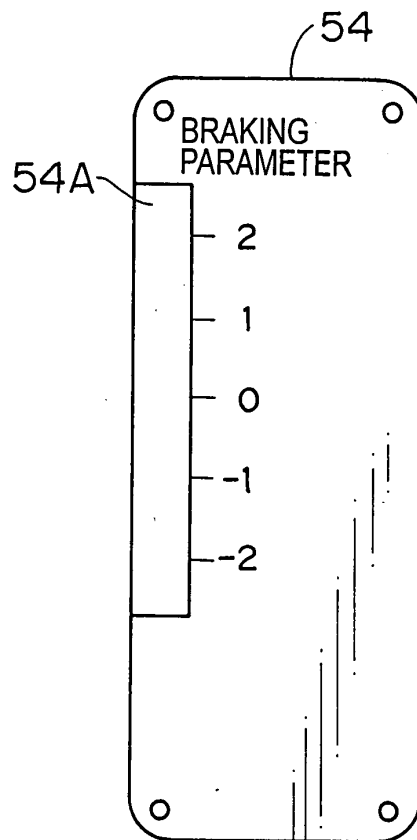


FIG. 8

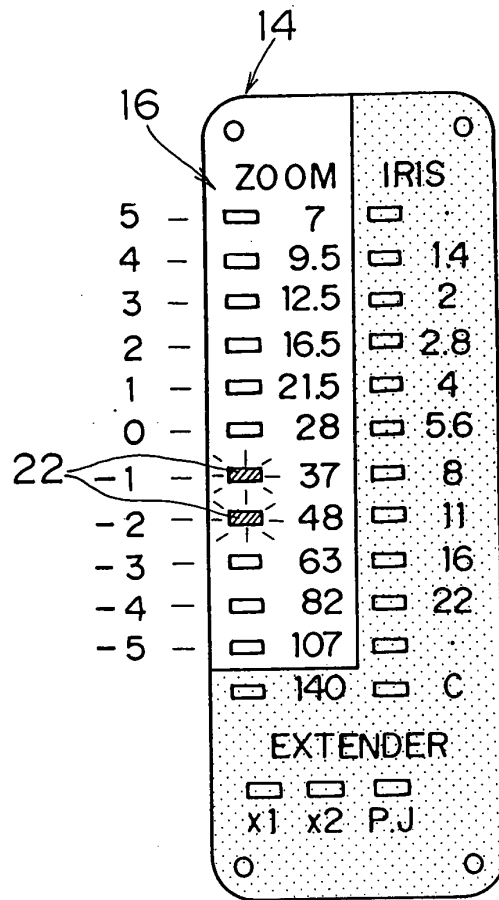
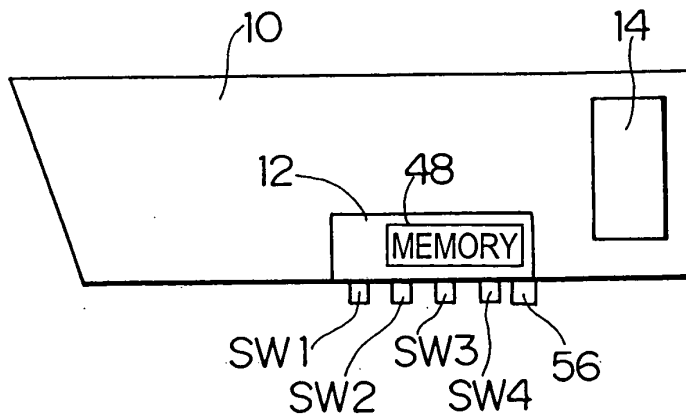


FIG. 9



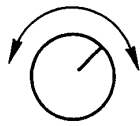


FIG. 10(A)

 


FIG. 10(B)

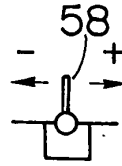


FIG. 10(C)

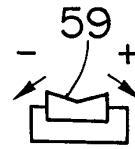


FIG. 10(D)

FIG. 11

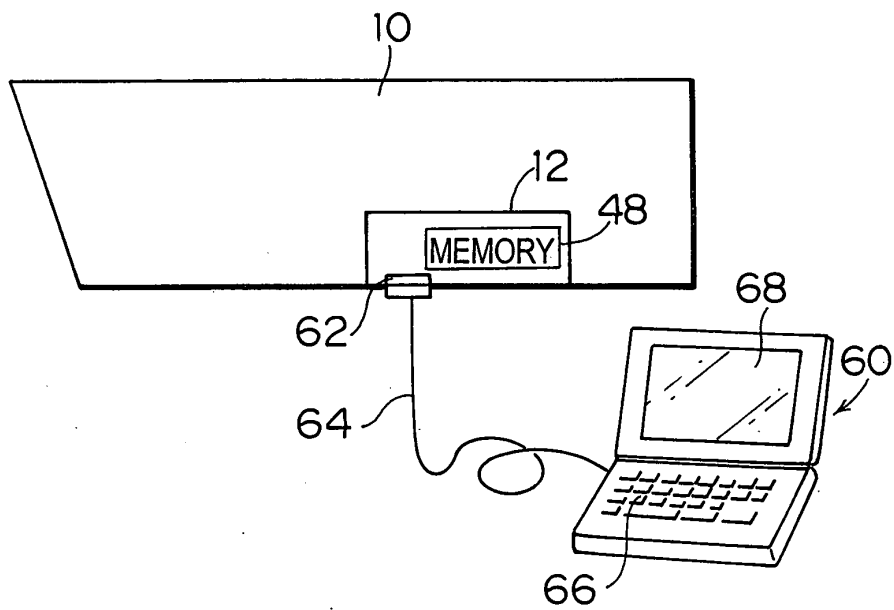




FIG. 12

SETTING BRAKING CONTROL PARAMETER

☐
☐
☒

FILE EDIT COMMUNICATION INITIALIZE

|                  |                               |    |
|------------------|-------------------------------|----|
| 82 CONNECTION    | INITIAL VALUE OF SERVO MODULE | 86 |
| 84 DISCONNECTION | INITIAL VALUE SET IN LENS     | 88 |

High

ZOOM SPEED

Low

WIDE

TELE

76

SET VALUE -1.5

78 OK

80 CANCEL

FIG. 13

